

## A) Lamp Replacement

The lamp should be replaced if one of the following conditions occurs: The projector image gets darker or starts to deteriorate, the message "LAMP REPLACE" appears on the screen when turning the TV on, or the lamp indicator is orange or red (see below). The lamp timer will prevent the TV from turning on when it reaches 16,000 hours. Most lamps will burn out before this time is reached, if not, it should be replaced anyway.

### Lamp Indicator



**Green (Flashing):**  
The lamp cover  
is not closed.

**Orange:**  
Projection lamp is nearing  
the end of its life and needs  
to be replaced.

**Red (Flashing):**  
There is a problem with  
the lamp or around it.

## Lamp Replacement

Before unplugging the TV make sure the lamp has cooled down.  
The fans will automatically turn off when the lamp has cooled down.

3. Remove the four screws holding the lamp cover on.
2. Remove the two screws holding the lamp in.
3. Pull the lamp module out using it's handle.
4. Reverse this procedure when putting the lamp back in.



## Lamp Replacement

### Reset The Lamp Timer

Plug the set in and it will go into stand-by mode. Press the "?" key on the remote control. Now press the numbers 9, 8, 7, 6 and the OK button. The three LEDs in the front will flash for a moment to verify the the lamp timer was reset to zero.

### Lamp Life Timer

You can view the amount of time the lamp has been used in adjustment mode. With "Ant/Cable 1" as the main source, press and hold the menu button until the OSD menu opens and then expands to a second level. Then press the numbers 9, 8, 7, 6 and the OK button. The display will show "Lamp Life Time XX Hrs".